



# Thanks for buying a Librem 5! The following steps will show you how to get started with your phone.

## 1. Install a SIM Card (and a microSD Card)

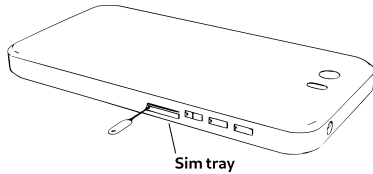

Open the SIM tray with the point of the extraction tool provided.

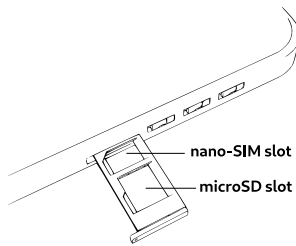

Insert a SIM card and an optional microSD card into the tray. Then, insert the tray back into the slot.


**WARNING:** Ensure that the phone is **powered OFF** before removing or inserting a SIM card.

## 2. Charge the Phone

You need to charge the phone before use:


1. Plug the charger into a suitable wall power outlet.
2. Connect the phone to the charger via the USB cable provided.

The indicator light should appear red to show that the phone is charging. It will turn off again when the phone is fully charged.

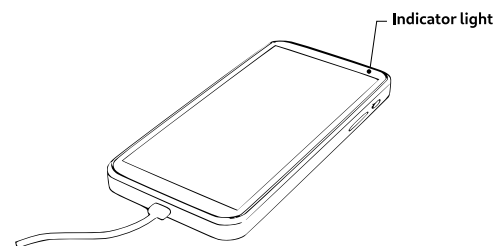


Leave the phone to charge for an hour.

## 3. Power On the Phone

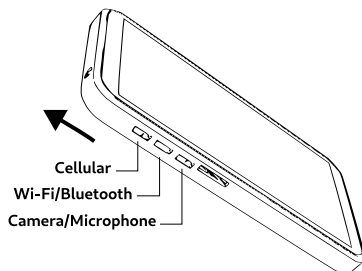


Enable Cellular and Wi-Fi features by pushing those switches up, away from the SIM slot, as shown.

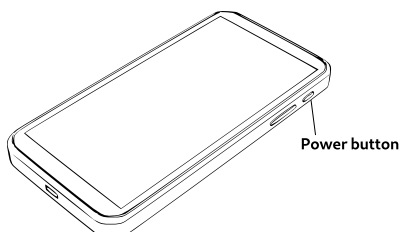

Hold down the power button until the indicator light appears green. The screen will light up shortly after.

## 4. Start Using PureOS

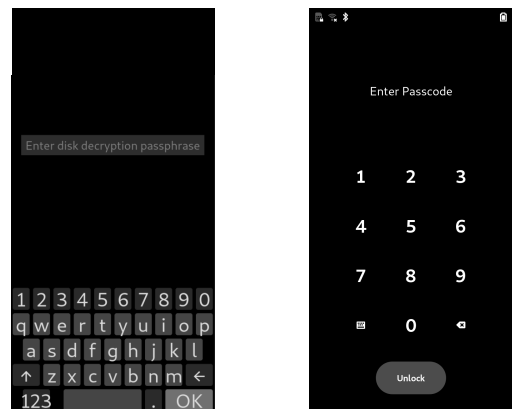

When starting up the Librem 5, you will be asked to unlock the disk encryption that is protecting your main storage. Then, you will be asked to unlock the lock screen.

In both cases the default passcode is the six digit **123456**.

To learn more about using the Librem 5 and changing the passcodes, see the documentation:

Librem 5 documentation : [https://docs.puri.sm/Librem\\_5.html](https://docs.puri.sm/Librem_5.html)

AweSIM documentation : [https://docs.puri.sm/Services/Librem\\_AweSIM.html](https://docs.puri.sm/Services/Librem_AweSIM.html)